

MP3-CD Soundmachine

AZ2558



Need help? Call us!

Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

**CALL US BEFORE YOU CONSIDER
RETURNING THE PRODUCT!**

1-800-531-0039

or

 
 
 
 
Visit us on the web at www.philips.com




PHILIPS

HEAVY !

*Take care of your CD Soundmachine.
Grip both handles when you carry or
lift the set.*

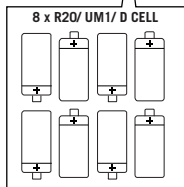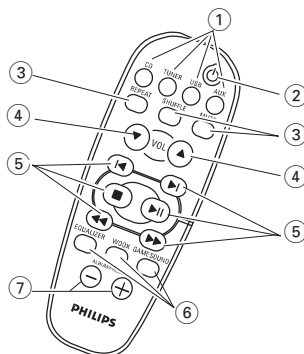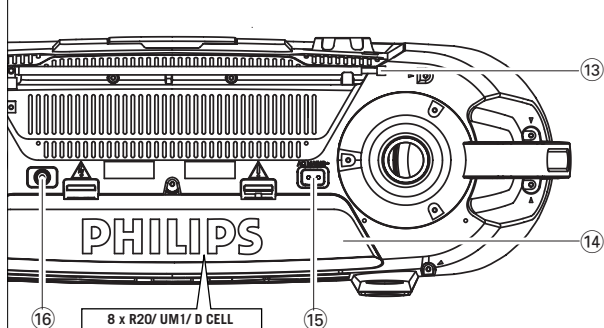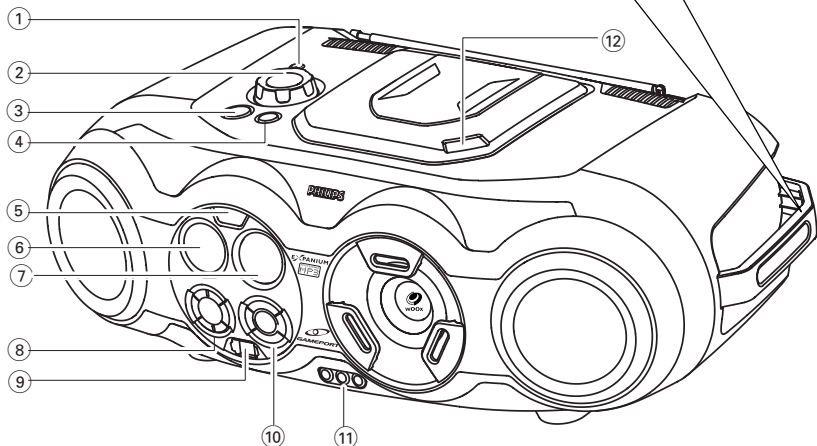

2

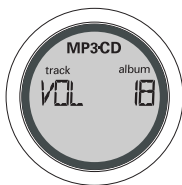 

7



 
3



8




4

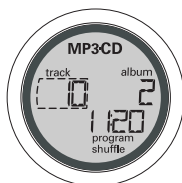

9



 
5

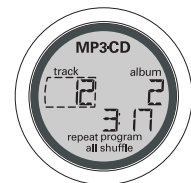


10



 
6

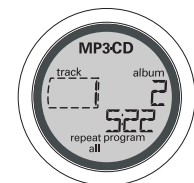

A

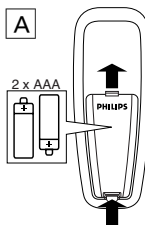 

B

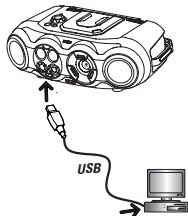 

English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and*
- 2. This device must accept any interference received, including interference that may cause undesired operation.*

Note : *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :*

- Relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

IMPORTANT :

Modifications not authorized by the manufacturer may void users authority to operate this device.

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these
safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

 
Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



AC Polarized Plug

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

EL 6475-E004: 02/8

Class II equipment symbol



This symbol indicates that the unit has a double insulation system.

LIMITED WARRANTY

PORTABLE AUDIO

One Year Free Exchange

This product must be carried in for an exchange.

WHO IS COVERED?

You must have proof of purchase to exchange the product. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, a defective or inoperative product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS EXCHANGE AVAILABLE?

You may exchange the product in all countries where the product is officially distributed by Philips. In countries where Philips does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

BEFORE REQUESTING EXCHANGE...

Please check your owner's manual for assistance. If you have additional questions, call us at 1-800-531-0039.

EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact 1-800-531-0039 to arrange an exchange. Or, ship the product, insured and freight prepaid, and with proof of purchase enclosed, to the address listed below.

Philips Exchange Program
Suite A
406 North Irish Street
Greenville TN 37745

(In U.S.A., Puerto Rico, and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

EXCHANGING A PRODUCT IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)
1-800-531-0039 (English or Spanish Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 520890, Miami, FL 33152, USA, (402) 536-4171

EL6095T004 / 8-02

English

SUPPLIED ACCESSORIES

- remote control
- USB cable
- video cable
- CD-ROM USB PC LINK installers
- AC power cord

TOP AND FRONT PANEL (See 1)

- ① - 3.5 mm stereo headphone jack.

Note: The speakers will be muted when headphones are connected to the set.

- ② **VOLUME** -adjust volume level or equalizer level (**BASS/ MID /HIGH**)
- ③ **STANDBY ON** - switch the set on/ off.
- ④ **SOURCE** - selects sound source for functions: **CD/ TUNER/ USB PC LINK/ GAME •AUX**
- ⑤ **IR SENSOR** -infrared sensor for remote control
- ⑥ **LCD Display** - shows the status of the set
- ⑦ **[dB]** - display to indicate bass power.
- ⑧ **ALBUM /PRESET -, + :**

MP3 only :- select previous / next album.
TUNER :-select a previous / next preset station.

SEARCH

MP3-CD / CD :

- searches backward or forward ;
- skips to the beginning of a current track/ previous/ later track.

USB PC LINK -skips to the beginning of a previous/ later track.

TUNER :- tunes to radio stations

▶**II**- starts or pauses MP3-CD / CD / USB PC LINK playback

- - stop MP3-CD / CD / USB PC LINK playback;
- erases a MP3-CD / CD program.

MODE :

- selects different MP3-CD play modes: e.g. **repeat** or **shuffle** order.

- ⑨ **USB** - connect the supplied USB cable here to the USB port of your computer

- ⑩ **GAMESOUND** - select sound effects: **BLAST/ PUNCH/ SPEED/ NORMAL** in **GAME •AUX** mode
- WOOX** - selects special bass enhancement on/ off
- EQUALIZER** -selects bass, mid and high frequencies.

CONTROL

PROG

MP3-CD / CD : -programs tracks and reviews the programmed songs;

TUNER : - programs radio stations.

FM•AM / DISPLAY

FM•AM :- selects waveband

DISPLAY:- display MP3-CD functions

- ⑪ **AUDIO IN (LEFT / RIGHT)** -LINE-IN jack for external audio appliance.

VIDEO IN - to keep video plug in place

- ⑫ **OPEN•CLOSE** – press to open/ close CD door

BACK PANEL (See 1)

- ⑬ **Telescopic antenna** - improved FM reception

- ⑭ **Battery compartment** - for 8 batteries, type R-20, UM-1 or D-cells

- ⑮ **AC MAINS** - inlet for power cord

- ⑯ **VIDEO OUT**- connect to the **VIDEO IN** jack on a TV or VCR for viewing or recording.

REMOTE CONTROL (See 1)

- ① **CD** - selects MP3-CD / CD sound source

TUNER - selects tuner source / wavebands

USB - selects **USB PC LINK**

AUX - selects **GAME •AUX**

- ② -switches the set to standby / on if set operating on AC power. (Switches set off only if battery powered)

- ③ **REPEAT** -repeat all tracks in **USB PC LINK** source or selects the repeat modes in **CD** source

SHUFFLE -plays MP3-CD / CD tracks in random order in **CD / USB PC LINK** source

MUTE - interrupts/ resumes sound

- ④ **VOL ▽, ▲** -- adjust volume level or adjust equalizer level (**BASS/ MID /HIGH**)

- ⑤ , -select previous/ next track in MP3-CD / CD / USB PC LINK playback

- - stop MP3-CD / CD / USB PC LINK playback;
- erases a MP3-CD / CD program.

▶**II** - starts or pauses MP3-CD / CD / USB PC LINK playback

, -searches backwards/ forwards within a MP3-CD / CD track.

TUNER :- tunes to radio stations

POWER SUPPLY

- ⑥ **EQUALIZER** -- selects bass, mid and high frequencies

WOOX -- select special bass enhancement on/ off

GAMESOUND - select sound effects: **BLAST/ PUNCH/ SPEED/ NORMAL** in game mode

- ⑦ **ALBUM /PRESET -, + :**

MP3 only :- select previous / next album.

TUNER :-select a previous / next preset station.

POWER SUPPLY

Whenever convenient, use the power supply to conserve battery life. Make sure you remove the power cord from the set and wall jack before inserting batteries.

Batteries (not included) (See 1)

- Insert 8 batteries, type **R-20, UM-1** or **D-cells**, (preferably alkaline) with the correct polarity.

Remote control (See A)

- Insert 2 batteries, type **AAA, R03** or **UM4** (preferably alkaline).

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.

- *Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.*
- *When inserting new batteries, do not try to mix old batteries with the new ones.*
- **Batteries contain chemical substances, so they should be disposed of properly.**

Using AC Power

1. Check if the AC power supply, as shown on the **type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
2. If your set is equipped with a voltage selector, adjust the selector so that it matches with the local power supply.
3. Connect the power cord to the wall jack and the set is now ready for use.
4. To disconnect the power supply, unplug the set from the wall jack.

BASIC FUNCTIONS

POWER-SAVING AUTOMATIC STANDBY

As a power-saving feature, the system automatically switches to standby 15 minutes after MP3-CD / CD has reached the end and no control is operated.

The type plate is located on the bottom of the set.

BASIC FUNCTIONS

Switching on and off and selecting function

1. Press **STANDBY ON** on the set to switch on.
2. Press **SOURCE** once or more to select your desired function: **CD, TUNER, USB PC LINK** or **GAME•AUX**.
3. Press **STANDBY ON** to switch off the set.

Note : The tone, sound settings, tuner presets and the volume level (up to a maximum volume level of VOL 20) will be retained in the set's memory.

Adjusting volume and sound (See 2)

1. Adjust the volume with the **VOLUME** control.
→ Display shows the volume level and a number from 0-32.
2. **w00x**
To enhance the bass response: press **w00x** once or more to switch on / off.
→ **w00x**-key backlight lights up when **w00x** is turned on.

Notes:

- **w00x** can be used when you play **TUNER, CD, USB PC LINK** and **GAME•AUX** source.
- *Some discs might be recorded in high modulation, which causes a distortion at high volume. If this occurs, deactivate **w00x** or reduce the volume.*

3. EQUALIZER

To adjust the bass, mid and high frequencies press **EQUALIZER** once or more, then rotate **VOLUME** within 3 seconds to adjust each level.

→ Display briefly shows **BASS**, **MID**, or **HIGH** level (**-5** to **+5**) or **VOL**.

Note:

1. **EQUALIZER** can be used during **TUNER, CD, USB PC LINK** and **GAME•AUX** source.

DIGITAL TUNER

2. To prevent sound interference the bass control options operate exclusively. You cannot combine the bass from **EQUALIZER** with **w00x**

4. GAMESOUND

To adjust the game sound, press **GAMESOUND** once or more to select your option.

→ Display briefly shows **BLAST**, **PUNCH**, **SPEED** or **NORMAL**.


Note: **GAMESOUND** is only available when you play in **GAME•AUX** source.

How to MUTE the sound

1. Press **MUTE** on the remote control to interrupt sound reproduction instantly.
→ Playback continues without sound and the display flashes **MUTE**.
2. To reactivate sound reproduction you can:
 - press **MUTE** again;
 - adjust the volume controls;
 - change to another source.

DIGITAL TUNER (See 3)

Tuning to stations

1. Press **STANDBY ON**  to on, then press **SOURCE** once or more to select **TUNER** (or press **TUNER** once on the remote control).
→ Display: shows **TUNER** briefly followed by waveband, frequency, and preset station number if already stored.
2. Press **FM•AM / DISPLAY** once or more to select your waveband (**TUNER** on the remote control)
3. **Tuning to stations:** you can tune to your stations manually or by automatic search tuning: Press down on **◀◀** or **▶▶** (**◀◀** or **▶▶** on the remote control) and release button when the frequency in the display starts running.
→ The radio automatically tunes to a station of sufficient reception. Display shows **SEARCH** during automatic tuning.
4. Repeat step 3 if necessary until you find the desired station.
 - To tune to a weak station, press **◀◀** or **▶▶** (**◀◀** or **▶▶** on the remote control) briefly and repeatedly

DIGITAL TUNER

until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
- For **AM**, the set uses a built-in antenna. Direct this antenna by turning the whole set.

Programming tuner stations:

You can store up to a total of 30 radio stations in the memory, manually or automatically (Autostore).

Autostore

Automatic programming will start from preset 1. The set will only program stations which are not in the memory already.

1. Press **ALBUM / PRESET-** or **+** once or more to select the preset number .
2. Press **PROG** for 4 seconds or more to activate auto store programming.
→ Display: **AUTOSTORE** is shown and available stations are programmed in order of waveband **FM**, followed by **AM** , preset 1 station will then be played after all stations are stored automatically.

Manual programming

1. Tune to your desired station (see **Tuning to stations**).
2. Press **PROG** to activate programming.
→ Display: **program** flashes.
3. Press **ALBUM / PRESET-** or **+** once or more to allocate a number from 1 to 30 to this station.
4. Press **PROG** again to confirm.
→ Display shows the preset number, waveband and the frequency of the preset station.
5. Repeat the above four steps to store other stations.

Note : You can erase a preset station by storing another frequency in its place.

To listen to a preset station

Press **ALBUM / PRESET-** or **+** once or more until the desired preset station is displayed.

MP3-CD / CD PLAYER

IMPORTANT SPECIFICATIONS

Supported formats:

- Disc format ISO9660, Joliet and multi-session CDs. Use ISO9660 disc format when burning CD-ROMs.
- MP3 music formats.
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate.
- 650Mb and 700Mb CD-R and CD-RWs.
- Directory nesting up to a maximum of 8 levels (max. 64 characters).

General information

The music compression technology MP3 (MPEG Audio Layer 3) reduces the original digital audio data by a factor up to 10 without losing significant sound quality. This allows you to record up to 10 hours of CD-like quality music on a single CD-ROM.

How to get MP3 music

Either download legal MP3 music from the internet or convert your audio CD into MP3 format with any MP3 encoder software, and then record onto a CD-R(W).

- To achieve a good sound quality a bit rate of at least 128kbps is recommended for MP3 files.
- Some encoder software offer an option to protect music files, i.e. the files can only be played on the computer which created them. If you burn such files on a CD-ROM, you cannot play them on this set. Make sure to deactivate the protection option in the encoder software before creating the music files. In this case you are responsible for adherence to all local or international copyrights.

When burning the MP3-CD

- To avoid problems with playback or missing files, make sure the file names are typed in English text characters and that the MP3 files end with **.mp3**
- Use a writing software capable of recording MP3 track titles (files) in numerical and alphabetical order. For details on using the software, refer to the operating instructions of the software.
- When recording on a CD-RW, make sure that you close (finalize) all sessions in order for the set to read and play your tracks.

MP3-CD / CD PLAYER

How to organize MP3 files

You can store up to a maximum number of 35 albums and 400 titles on one MP3-CD, depending on the song file sizes.

Albums and titles are alphabetically sorted.

- MP3-CD/ CD albums and titles are shown as numbers in the display.

IMPORTANT!

This set does not play/support the following:

- Empty albums: an empty album is an album that does not contain MP3 files, and will not be shown in the display.
- Non-supported file formats are skipped. This means that e.g.: Word documents **.doc** or MP3 files with extension **.dlf** are ignored and will not be played.
- **Playlist Files** e.g. .m3u, .pls of WMA, AAC, Winamp, Sonic, RealJukebox, MS Mediaplayer 7.0, MusicMatch.
- Recordings created on e.g. **PacketWriting** and **Package Writing**.

Playing MP3-CD & CD

This CD player plays Audio Discs including CD-R(W)s, and MP3 CD-ROMs.

- CD-I, CDV, VCD, DVD or computer CDs, are not possible.
1. Press **STANDBY ON** once or more to on, then select **CD SOURCE**.
 2. Press **OPEN•CLOSE** to open the CD door.
⇒ **CD OPEN** is displayed when the CD door is open.
 3. Insert a CD with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
⇒ Display show **READ** ,when reading disc contents;
⇒ Display : **INSERT DISC** if no disc inserted/ disc incorrectly inserted.,
⇒ Display : **CHECK DISC** or **DISC ERROR** if disc damaged / dirty:
 - **CD** throughout CD operation;
 - **MP3 CD** throughout MP3-CD operation;
 - In CD stop mode: total track number and total playback time.

MP3-CD / CD PLAYER

- **NF DISC** is shown if you have inserted a non-finalized CD-R(W) / black disc.

Note: MP3-CDs may take more than 10 seconds to read.

4. Press **▶II** to start playback.
→ Display: Current track number and elapsed track time during MP3-CD / CD playback.
→ If MP3-CD, the album number also is shown.
5. To pause playback press **▶II**. Press **▶II** again to resume play.
→ Time digits flashes during pause.
6. To stop MP3-CD / CD playback, press **■**.
7. Press **STANDBY ON** to switch off the set.

Note: MP3-CD / CD play will also stop when:

- the CD door is opened
- the CD has reached the end
- you select other sound source.

MP3-CD/ CD text display

During playback, press the **FM•AM / DISPLAY** button briefly and repeatedly to view text information:

MP3-CDs

Press **FM•AM / DISPLAY** once or more to view e.g.

- track name and elapsed track time;
- album name and elapsed track time;
- album number, track number and elapsed track time;

– ID3 tag details, if available. Otherwise, display shows **NO ID3 TAG**.

CDs

Press **FM•AM / DISPLAY** once or more to view e.g.

- Current track number and elapsed track time during CD playback;
- Remaining playback time of current track.

Selecting a different track

- Press **SEARCH** or (on the remote control or) once or repeatedly until the desired track number appears in the display.
- If you have selected a track number shortly after loading a disc or in the **PAUSE** position, you will need to press **▶II** to start playback.

MP3-CD / CD PLAYER

MP3-CD mode only:

First press **ALBUM/ PRESET** – or + once or more to find your album.

⇒ Display: **NO ALBUM** if no albums are available.

Finding a passage within a track

1. Press and hold **SEARCH** or (on the remote control or)
– The CD is played at high speed and low volume.
– No sound is heard during MP3-CD fast cue/ review.
2. When you recognize the passage you want, release or . Normal playback continues.(on the remote control or)

Note: Searching is only possible within a track.

Different play modes: SHUFFLE and REPEAT (See -)

You can select and change the various play modes before or during playback. The play modes can also be combined with PROGRAM.

shuffle - tracks of the entire CD/ program are played in random order

shuffle repeat all - to repeat the entire CD/ program continuously in random order

repeat all - repeats the entire CD/ program

repeat - plays the current track continuously

1. To select play mode, press **MODE** once or more. (**SHUFFLE / REPEAT** on the remote control).

2. Press **▶II** to start playback if in the stop position.
⇒ If you have selected **shuffle**, playback starts automatically.

3. To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
 - You can also press the **■** to cancel your play mode in playing.

MP3-CD / CD PLAYER

Programming track numbers

Program in the stop position to select and store your CD tracks in the desired sequence. If you like, store any track more than once. Up to 20 tracks can be stored in the memory.

1. Press **SEARCH** ◀◀ or ▶▶ on the set to select your desired track number.(on the remote control ◀◀ or ▶▶)

MP3-CD mode only:

First press **ALBUM/ PRESET** – or + once or more to find your album, then press **SEARCH** ◀◀ or ▶▶ (on the remote control ◀◀ or ▶▶).

2. Press **PROG**.
 - Display: **program** and the selected track number **PROG** appears briefly.
 - Display : **SELECT TRACK** if no track selected for programming.
3. Repeat steps **1-2** to select and store all desired tracks.
 - Display: **FULL** if you try to program more than 20 tracks.
4. To start playback of your disc program, press ▶▶.

Note: During normal playback, you can press **PROG** to add a current track to your program list.

Reviewing the program

In stop position, press and hold down **PROG** for a while until the display shows all your stored track numbers in sequence.

→ Display **NO PROG** if no tracks programmed.

Erasing a program

You can erase the program by:

- pressing ■ twice;
 - **CLEAR** displayed briefly, and **program** disappears.
- pressing **STANDBY ON** ⏻
- selecting another sound source
- opening the CD door.

GAMESOUND / USB PC LINK

GAMESOUND (See 8)

PLAYING WITH GAMESOUND:

1. Press **SOURCE** once or more on the set to select the **GAME•AUX** function (**AUX** on the remote control)
→ Display scrolls : **GAME PORT**
2. Connect your console to the cinches on the front of the set **AUDIO IN** (**LEFT / RIGHT**) and **VIDEO IN**.
3. Press **GAMESOUND** once or more to select your game sound option.
 - Display briefly shows **BLAST** , **PUNCH** , **SPEED** or **NORMAL**.

Connecting other equipment to your system

Use the supplied video cable to connect the **VIDEO OUT** terminal on the back of the set to **VIDEO IN** on a TV or VCR for viewing or recording.

USB PC LINK

Quick Setup Guide

PC system requirements

- USB port with Windows 98 SE / ME/ 2000/ XP
- Intel Pentium MMX200 or higher
- CD-ROM drive

Installing MusicMatch software

1. Use the supplied USB cable to connect the set to the USB port on your computer. (See 8)
2. Press **SOURCE** (**USB** on the remote control) once or more to select **USB PC LINK**.
3. Turn on your PC then insert the supplied USB PC LINK installer disc in the PC's CD-ROM drive. This application software can also be downloaded from <http://www.audio.philips.com>.

IMPORTANT!

Please use this customized MusicMatch software for your USB PC Link application. Remember to un-install all other MusicMatch jukebox software first from your PC system (if available).

USB PC LINK

4. The installation guide will appear automatically. If it does not, go to the CD-ROM drive in **Windows Explorer** and double click on the **USB PC LINK.exe**. Then perform the following steps:
- Select your desired language from the list.
 - Select **installer driver**.
 - Select **installer MusicMatch jukebox**.
 - Select other options (**Tutorial, Free goodies, FAQ**).

Note:
– You are advised to read the MusicMatch tutorial before using it for the first time. Make sure the volume on your PC is suitably adjusted to ensure sound output on the set. For optimum performance, the equalizer function in MusicMatch should be set to a low level.

5. Launch **MUSICMATCH JUKEBOX** and create your own playlist of favorite songs by dragging and dropping the music track from anywhere on your PC into the playlist window.

Note:
– If you encounter any problem using the USB PC LINK, please refer to the FAQ (Frequently Asked Questions) stored in your USB PC LINK installer disc or visit www.audio.philips.com for the latest FAQ updates .

After setup, refer to "Connecting to USB PC Link" for details on the USB PC LINK operations.

Enable digital CD audio output
Before playing CDs on your PC's CD-ROM drive, it is necessary to configure your PC's hardware as follows:

- For Windows ME/ 2000/ XP**
1. Enter the system panel menu and select **'SYSTEM', 'PROPERTIES', 'HARDWARE', 'DEVICE MANAGER', 'CD-ROM DRIVES'** and **'PROPERTIES'**.

- For Windows 98 SE**
2. Check the **Enable digital CD audio for this CD-ROM device** setting option is selected (enabled).

Note:- For windows 98 SE you may need to refer to your PC's manual for correct configuration.

USB PC LINK

Connecting to USB PC Link (See [9])
The USB PC LINK allows you to playback your music collection from the PC via the powerful amplifier and speakers of this set.

IMPORTANT!
Make sure the MusicMatch software has been installed. Refer to "Quick Setup Guide" for the USB PC Link.

1. Turn on your set and computer .
⇒ Check your PC volume is suitably adjusted and not set to minimum / mute.
2. Press **SOURCE (USB)** on the remote control) once or more to select **USB PC LINK** .
3. If correctly connected your PC will automatically launch **MUSICMATCH JUKEBOX**.
⇒ If the audio streaming is detected, the current track name scrolls .
⇒ If **NO CONNECTION** scrolls for a while, check the connection between your PC and set.
4. Press **◀** or **▶** until the desired track in the playlist is highlighted.
5. Press **▶||** to start playback.
⇒ The track time appears and the track name scrolls once.

Note: The display only supports English characters in uppercase.

6. If you want to see the track details displayed press **MODE**.
During playback,
– Press **SHUFFLE** on the remote control to play all available tracks in the playlist in random order.
– Press **REPEAT** on the remote control to repeat playback all the tracks in the playlist.
7. To cancel play modes/ stop playback, press **■** or select another sound sources.

MAINTENANCE & SAFETY

- MAINTENANCE & SAFETY (See [10])**
- CD player and disc handling**
- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
 - The lens of the CD player should *never be touched!*
 - Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
 - To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
 - *Never* write on a CD or attach any stickers to it.

MAINTENANCE & SAFETY




- Safety Information**
- Don't expose the set, batteries, CDs to humidity, rain, sand or excessive heat.
 - Clean the set with a dry cloth. Don't use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the set.
 - Place the set on a hard and flat surface so that the system does not tilt. Make sure there is good ventilation to prevent the set from overheating.
 - Apparatus shall not be exposed to dripping or splashing.
 - Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

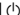No sound /power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries flat / incorrectly inserted
- Insert (fresh) batteries correctly
- Headphones connected to the set
- Disconnect headphones
- Electrostatic discharge/interference
- Unplug the set. If batteries inserted, remove batteries from the battery compartment. Press and hold **STANDBY ON**  for 10 seconds, then re-plug / replace battery supply, and try activating the set again.
- When in USB PC LINK mode, check that your PC's volume is audible and not set to minimum.
- When playing a CD from the PC's CD-ROM drive, refer to **USB PC Link - Enable digital CD audio output**.
- CD contains non-audio files
- Press **SEARCH**  or  once or more to skip to a CD audio track, instead of the data file

Poor sound quality in GAME•AUX mode

- Adjust the volume on the set or on your game console

Severe radio hum or noise

- Electrical interference: set too close to TV, VCR or computer
- Move the set to increase the distance

Remote control does not function properly

- Batteries flat/ incorrectly inserted
- Insert (fresh) batteries correctly
- Distance/ angle between the set too large
- Reduce the distance/ angle

Poor radio reception

- Weak radio signal
- FM / AM: Adjust the FM / AM telescopic aerial

NF DISC indication

- CD-R(W) is blank/ not finalized
- Use an unfinalized CD-R(W)

INSERT DISC/CHECK DISC/DISC ERROR indication

- No CD inserted
- Inserted a suitable disc
- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared

The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- shuffle or program is active
- Switch off shuffle / program

NO CONNECTION is displayed in USB PC LINK mode for more than 10 seconds

- Check the connection between your PC and the set. If necessary, please refer to the chapter **Connecting to USB PC Link** for the initial setup required.
- Make sure the connected PC is turned on and the MusicMatch software is working.

Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc

Cannot find desired MP3 title

- Wrong file extension used and/ or file name with unsuitable text characters used
- Make sure the file names are typed in English text characters and that the MP3 files end with .mp3

English

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 materials: cardboard, expandable polystyrene, polyethylene.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, exhausted batteries and old equipment.

Philips AZ2558



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE

Philips Consumer Electronics North America
One Philips Drive
Knoxville TN 37914
Phone: 1-800-531-0039

PHILIPS CONSUMER ELECTRONICS NORTH AMERICA

Knoxville, Tennessee 37914-1810, U.S.A.

 
English

Français

Español

Meet Philips at the Internet

<http://www.philips.com>

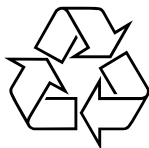

AZ 2558

**CLASS 1
LASER PRODUCT**

3140 115 3102.1



Printed in China